


# Anchor System

For Rhino Pneumatic Post Drivers



Pneumatic • Hydraulic • Gasoline  
Professional Grade Tools

## The Square Tube Break-Away Anchor System

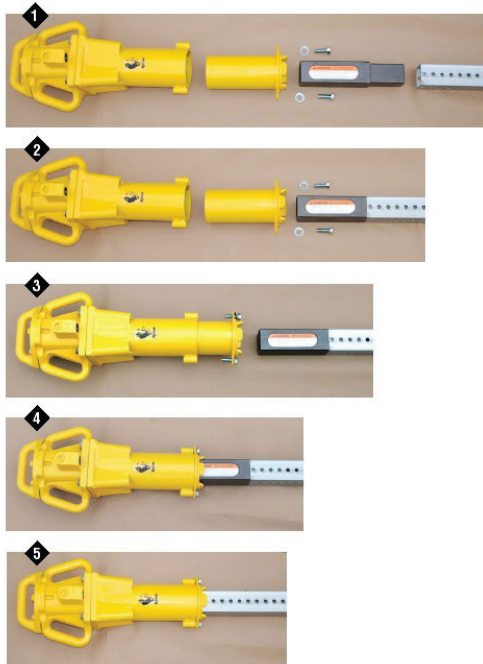

Drives Square Anchors within 2 inches of ground level. Will drive up to a 2-1/2" square anchor\*.

Adapter Part Numbers:

PD-55	071014
PD-110	071017
PD-140	071015
PD-200 5-1/2" MC	071043

Drive Cap Part Numbers for Use with above Adapters:

1-1/4" sq anchor*	071004
1-1/2" sq anchor*	071005
1-3/4" sq anchor*	071006
2" sq anchor*	071007
2-1/4" sq anchor*	071008
2-1/2" sq anchor*	071009

\*Anchor Drive Caps are sold by the outside dimension of the Anchor

## The Channel Post Break-Away Anchor System

Drives Channel Post Anchors within 2 inches of ground level. Will drive up to a 4 lb/ft Channel Post Anchor

Adapter Part Numbers:

PD-55	070832
PD-110	070847
PD-140	070874
PD-200 5-1/2" MC	071039

Drive Cap Part Number for Use with above Adapters:  
Channel Drive Cap 070836

This Adapter and Drive Cap is to be Used for Anchors Only. The Drive Cap can Present a Safety Hazard as the Drive Cap is Not Attached to the Driver or Adapter and can Fall and Cause Injury.



A Tradition of Quality and Service Since 1975

Visit [rhinotool.com/dealer-locator](http://rhinotool.com/dealer-locator) to find your nearest Rhino® dealer.

© Copyright 2017 Rhino Tool Company, Inc.

[www.rhinotool.com](http://www.rhinotool.com)  
 866-707-1808