Regular Service Period

| Item | Each Use | First Month Or 10 Hours | Every 3 Months Or 25 Hours | Every 6 Months Or 50 Hours | Every 12 Months Or 100 Hours | Refer to Page |
|--|----------|----------------------------|-------------------------------|-------------------------------|---------------------------------|----------------------------|
| Engine Oil Check Level | x | | | | | Page 6 |
| Engine Oil Change | | х | | х | | Page 6 |
| Air Cleaner Check | х | | | | | See Honda Engine Manual |
| Air Cleaner Clean | | | X (1) | | | See Honda Engine Manual |
| Air Cleaner Replace | | | | | х | See Honda Engine Manual |
| Crankcase Lubrication Check | х | | | | | Page 12 |
| Check Engine and Post Diver Fasteners | х | | | | | Page 23 |
| Remove, Service, Piston Hammer and Anvil | | | | | х | Page 13 |
| Other Honda Engine Maintenance Schedule | | | | | | See Honda Engine Manual |

⁽¹⁾ Service more frequently when used in dusty areas.